


FIVE FOOT ROCK WALL INSTRUCTIONS

Step #1- Rockwall Joist Install

Install Rockwall joist RWJL2470 and RWJR2470 to post using one 5/16"x3" lag bolts (B3) on each side (as shown in drawing). Rockwall joists will rest flush with top of floor.


Reminder: Recessed holes must be piloted with 1/4" drill bit

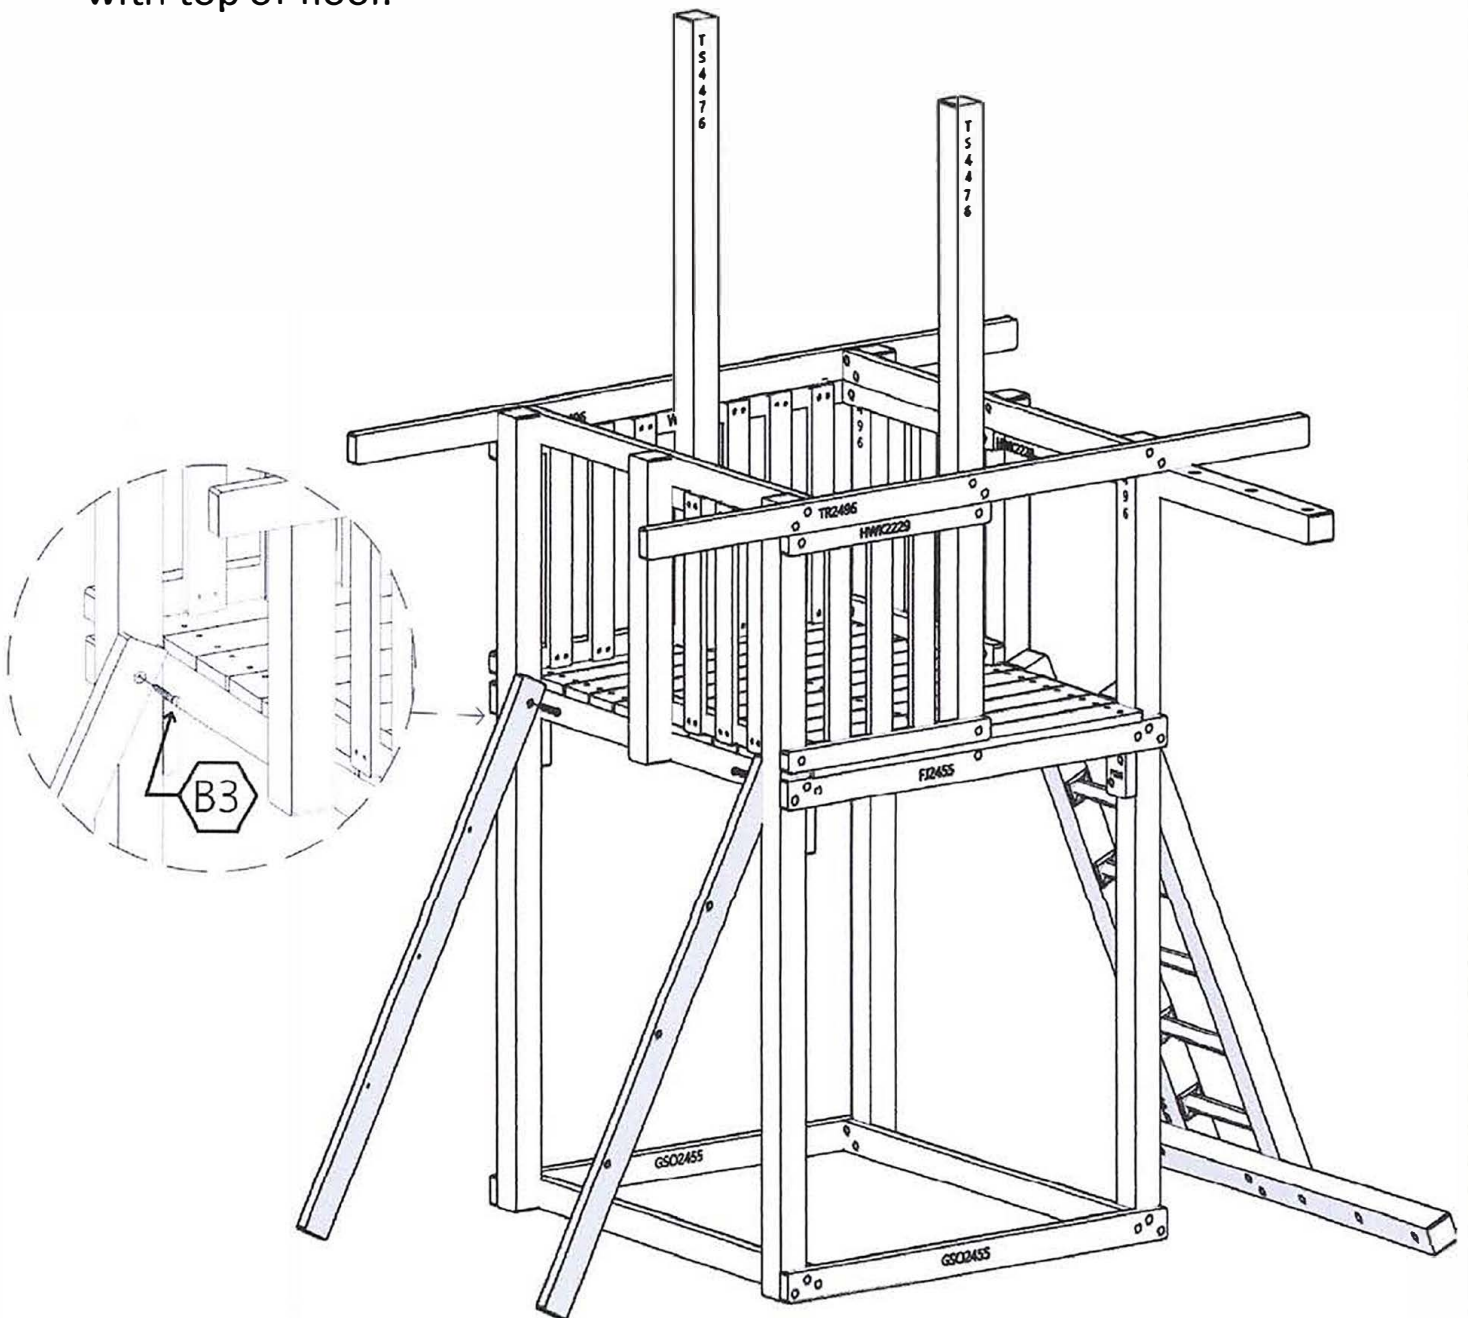

Step #2- Rockwall Kit Install

Install RWK1448 on top of RWJR2470 and RWJL2470 using six 5/16" x 2" lag bolts.(B2)


Note: RWK should be flush with RWJ2470 at the top of the wall.

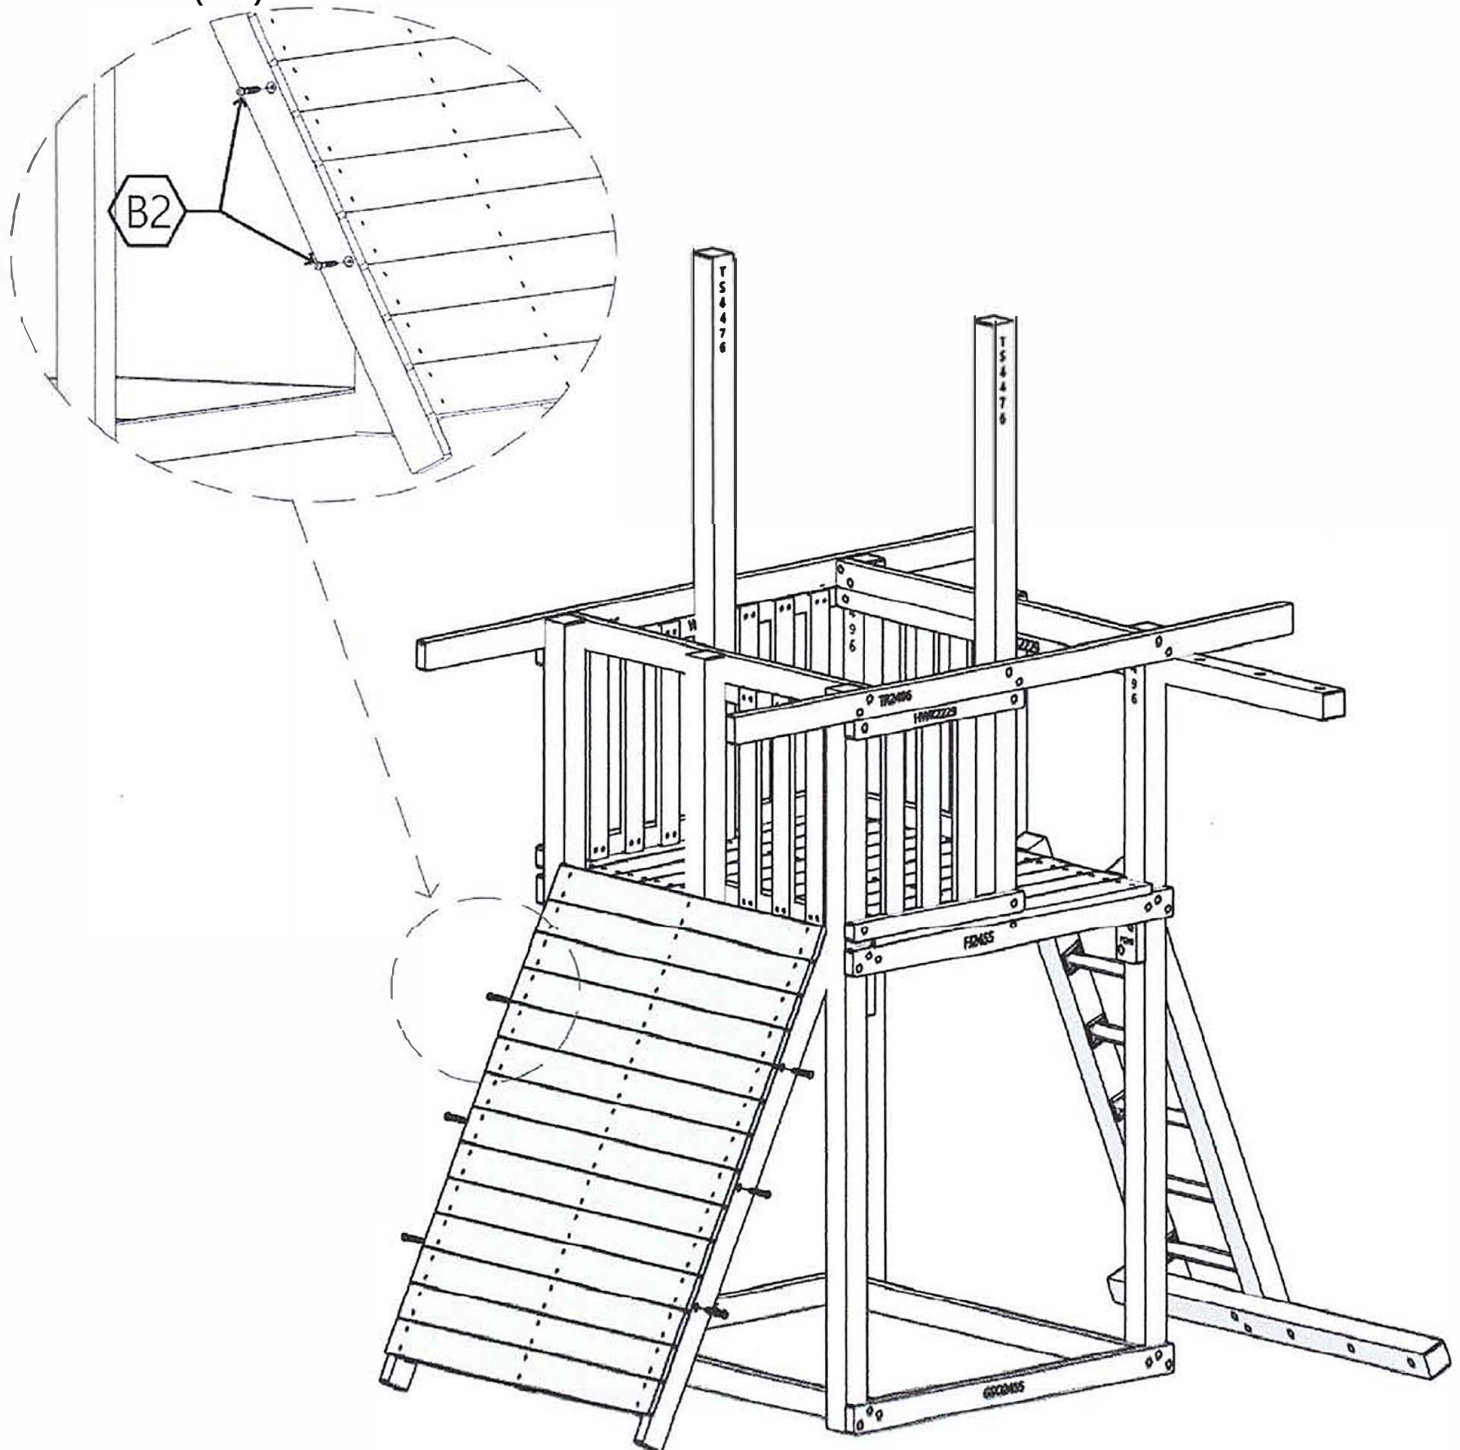

Step #3- Rockwall Handholds

Place 12 rock hand holds in desired location on decking of rock wall.

After you have located your desired positions. Mark with a pencil where to drill holes. Remove rocks and drill holes using a 3/8 drill bit.

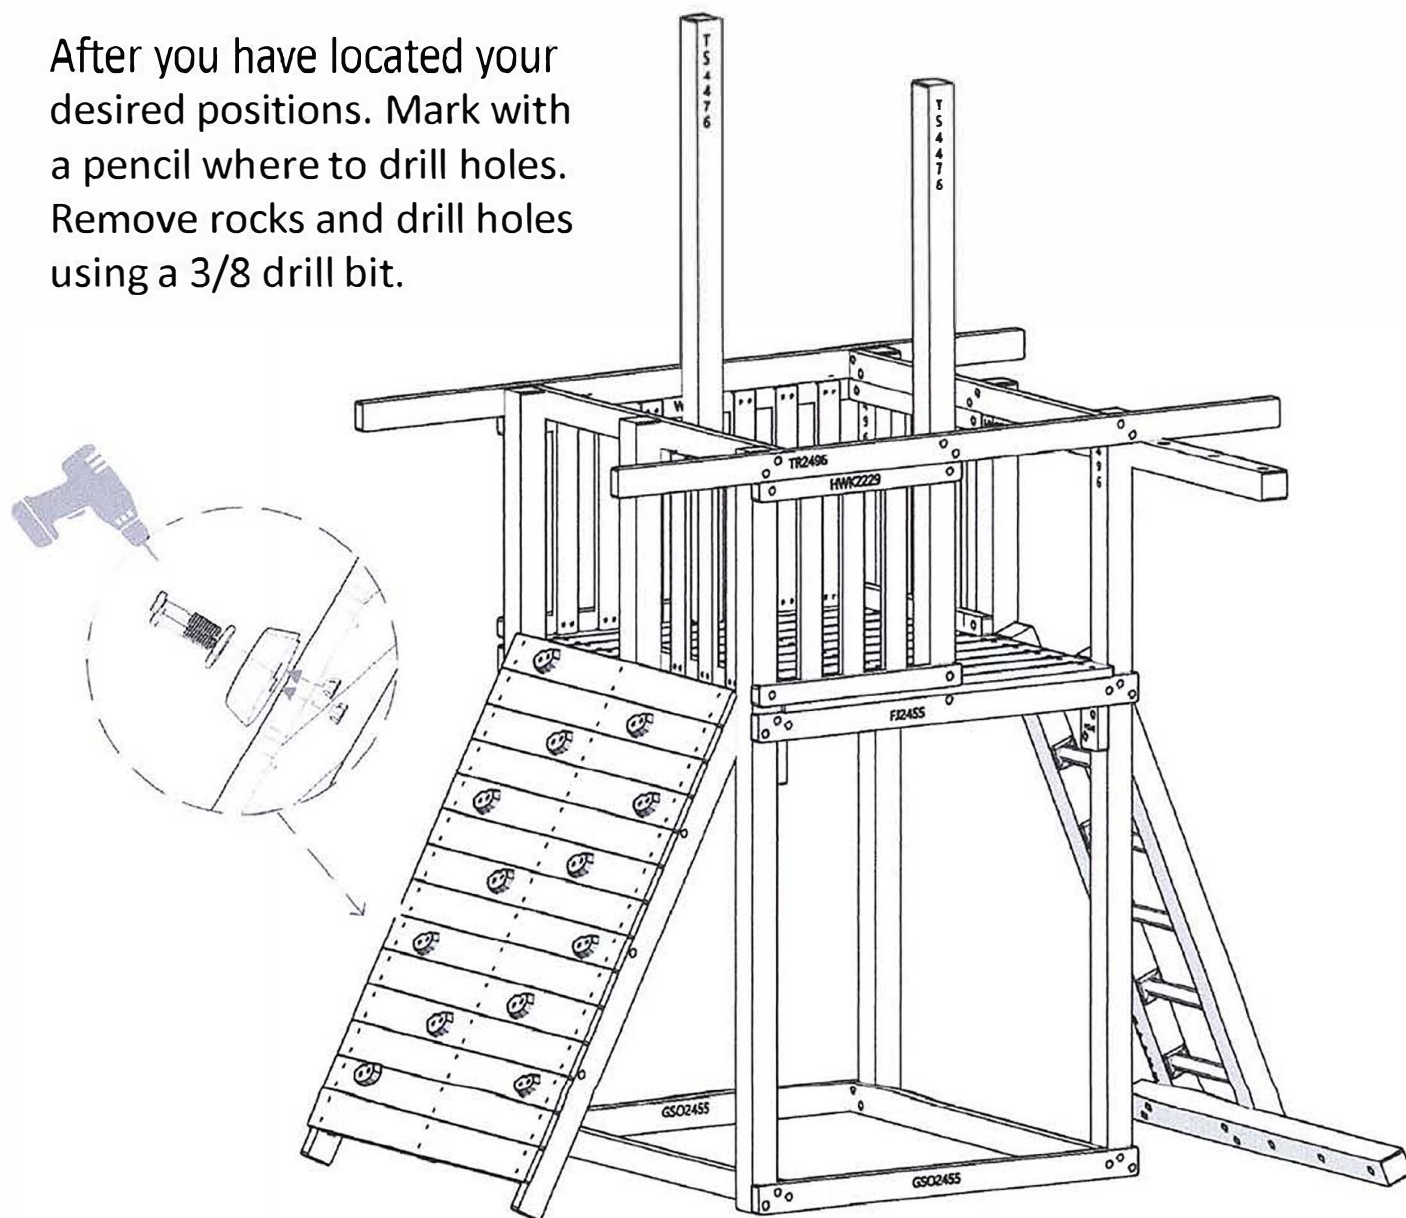

Place a set of T-nuts into the back of Rockwall. Place rock on decking insert washer I. than lock washer and bolt in place. Tighten using a 7/16" socket. Continue until all twelve rock hand holds are completed - see photo of suggested placement

